
1) Insert the Velcro strip into the tool with the loop side facing up, and push it in until fully inserted.

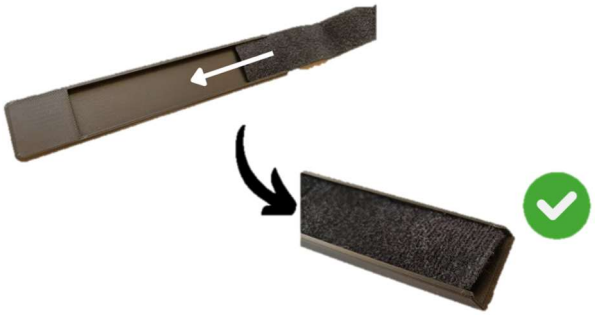

2) Feed the tool with the Velcro through two MOLLE rows.



3) Unfold the Velcro and remove the tool.



4) Repeat the process for the second Velcro strip, leaving a two-row gap between them.
5) Install the MOLLE mount by threading the Velcro through the cutouts in the mount.



6) A) Starting with the bottom part, fold the Velcro inward and press the hook and loop sides together as tightly as possible.



B) Secure the Velcro strips with attached clips

